

 
Radio

Operating the Radio

The receiver has a built-in tuner that allows for FM radio function.

Manual tuning

1. Connect the FM antenna accordingly.
2. Press **SOURCE** on the front of the unit until the tuner mode is selected. You may also directly press **TUNER** on the remote control.

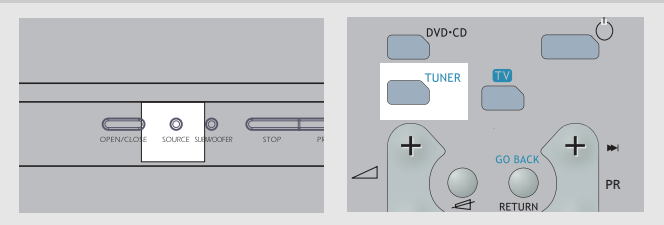

3. When the FM station broadcasts Stereo sound, ST is displayed.
4. Tune the a station by pressing **TUNER +** or **TUNER -** on the remote control repeatedly until the desired station is found.



Alternatively, you can press and hold the same button for about one second to activate the automatic search function. In this mode the receiver will automatically tune frequencies until it finds a station.

5. Repeat steps 4 to tune to another radio station.



Note:

 
If there is interference, modify the location of the antenna until the optimal sound is heard. TV and other electronic devices could be the cause of interferences so try to position the antenna away from them.

Storing radio stations:


The receiver can store up to 40 radio stations in memory. You can enter every single radio station yourself or the receiver can store all available radio stations automatically in an ascending order.

Manual preset

1. Tune to a radio station (see "Manual tuning" for details)
2. Press **MENU** on the remote control. "PRESET" will appear on the display.

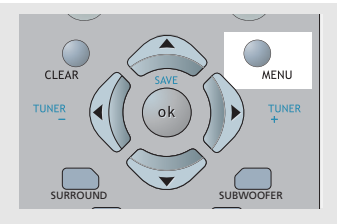

 3. While the word "PROG" is still flashing, input your desired preset number (1-40) using the **UP/DOWN** on the remote control, then press **OK** again to store it.

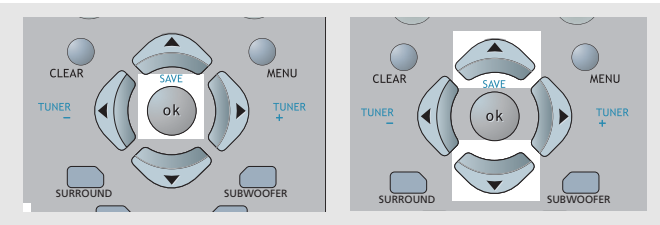

Radio

Retrieving preset stations

1. Press **SOURCE** on the unit or **TUNER** on the remote control to enter the tuner mode.
2. Press **PRESET +** or **PRESET -** on the unit or **PR+** or **PR -** on the remote control to search up or down the preset stations.

